


AIR BODY SAW

UB11

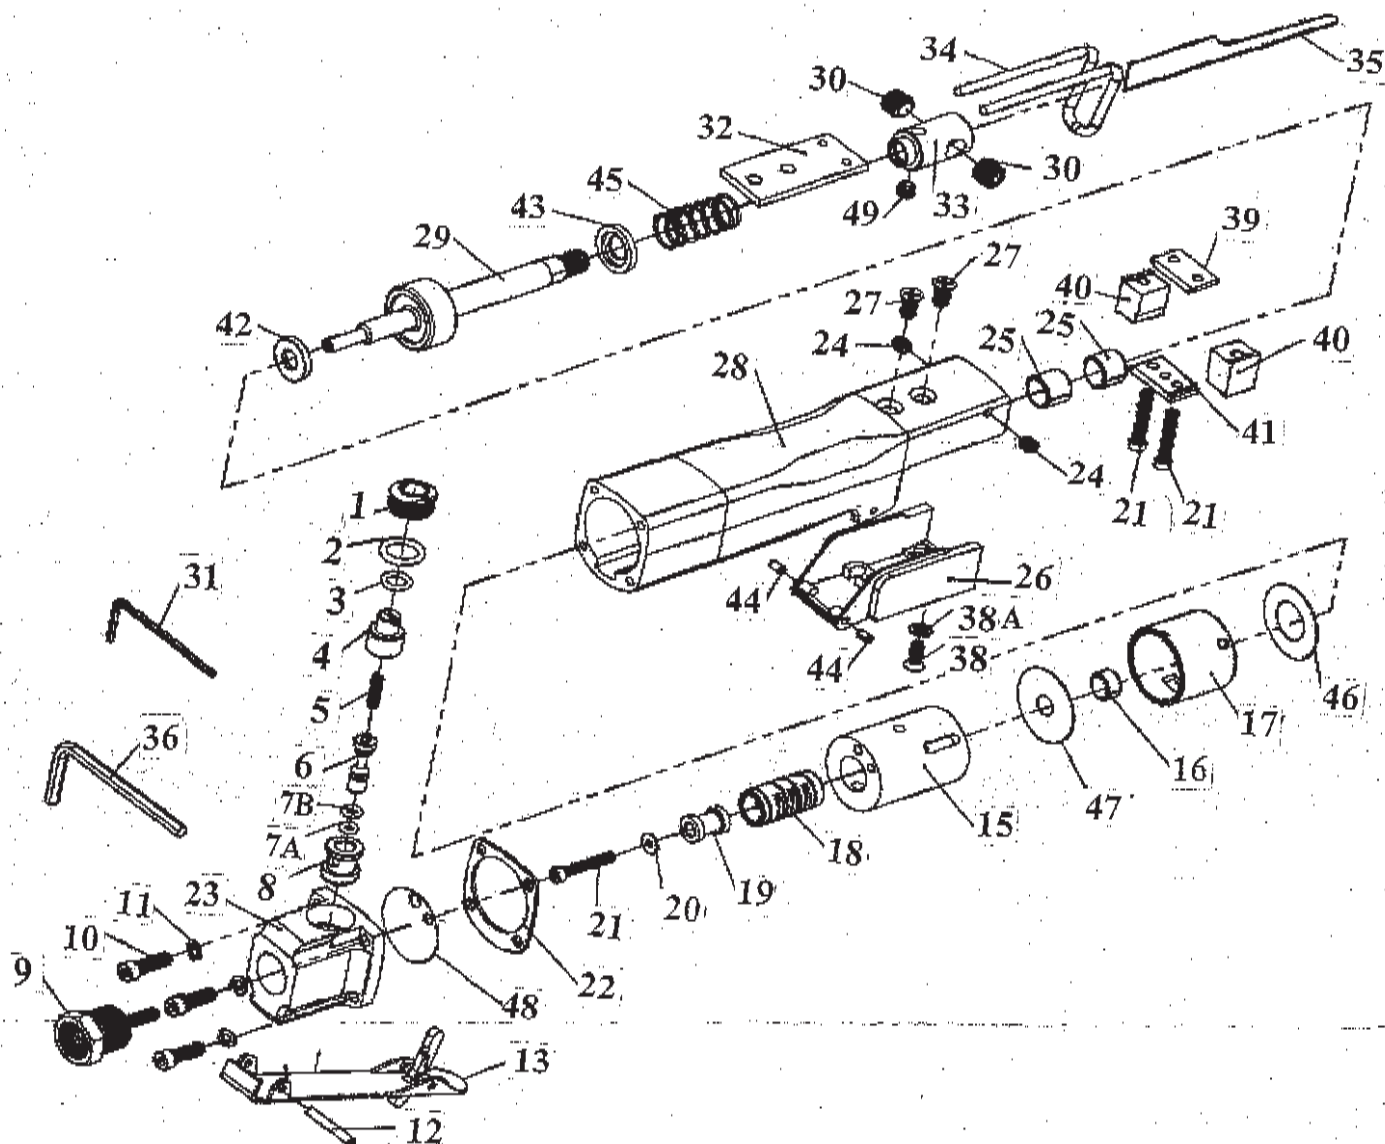

PARTS LIST:

NO	PART NO	DESCRIPTION	Q'ty
1	6011A-01	Valve Screw	1
2	6011A-02	O-Ring	1
3	6011A-03	O-Ring	1
4	6011A-04	Air Controller	2
5	6011A-05	Valve Spring	1
6	6011A-06	Valve Stem	1
7A	6011A-07A	O-Ring	1
7B	6011A-07B	O-Ring	1
8	6011A-08	Valve Bushing	1
9	6011A-09	Air Inlet	1
10	6011A-10	Cap Screw	4
11	6011A-11	Washer	4
12	6011A-12	Lever Pin	1
13	6011A-13	Throttle Lever	1
15	6011A-15	Valve Case	1
16	6011A-16	Bush	1
17	6011A-17	Cylinder	1
18	6011A-18	Valve Steeve	1
19	6011A-19	Actuate Valve	1
20	6011A-20	Washer	1
21	6011A-21	Cap Screw	3
22	6011A-22	Gasket	1
23	6011A-23	Valve Block	1
24	6011A-24	Set Screw	2
25	6011A-253	Bush	2
26	6011A-26	Chuck Cover	1

NO	PART NO	DESCRIPTION	Q'ty
27	6011A-27	Screw	2
28	6011A-28	Housing	1
	6011A-28A	Plastic Wrapp	1
29	6011A-29	Pising Ass'y	1
30	6011A-30	Set Screw	2
31	6011A-31	Service Wrench	1
32	6011A-32	Guide Plete	1
33	6011A-33	Blade Chuck	1
34	6011A-34A	Work Guide(Long)	1
	6011A-34B	Work Guide(Short)	1
35	6011A-35A	Saw Blade(32T)	1
	6011A-35B	Saw Blade(24T)	1
36	6011A-36	Service Wrench	1
38	6011A-38	Screw(M4*10)	1
38A	6011A-38A	Retaining Ring	1
39	6011A-39	Uper Wear Shoe	1
40	6011A-40	Brade Guide	2
41	6011A-41	Bridge	1
42	6011A-42	Fornt Bumper	1
43	6011A-43	Rear Bumper	1
44	6011A-44	Sprint Pin	2
45	6011A-45	Spring	1
46	6011A-46	Packing	1
47	6011A-47	Packing	1
48	6011A-48	Packing	1
49	6011A-49	Set Screw	1